


# 30cm Induction Cooktop

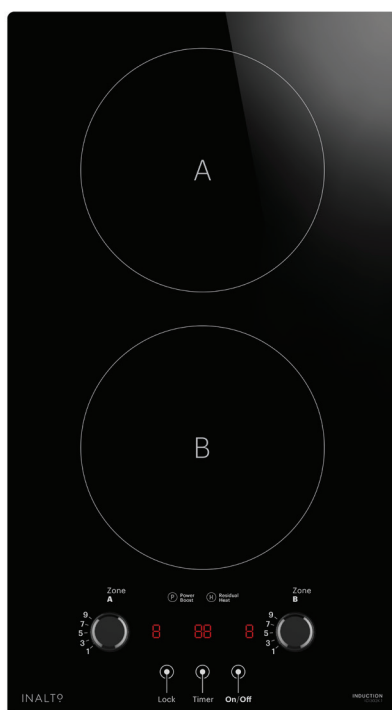


## FEATURES

2 Cooking Zones, Knob & Touch Controls,  
9 Power Levels, Power Boost Function, Child Lock,  
99 Minute Auto-off Timer, Toughened Ceramic Glass

# Congratulations on your new InAlto 30cm Induction Cooktop!

## YOUR INDUCTION COOKTOP

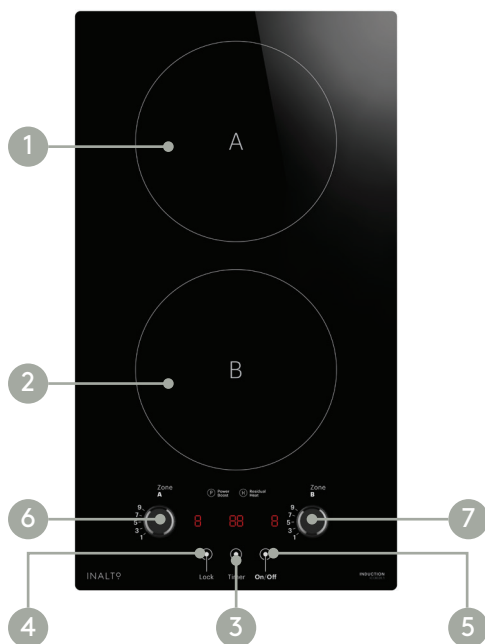

### Legend:

1. Zone A: Max. 1800/2000 W zone
2. Zone B: Max. 1800/2000 W zone
3. Lock control
4. Timer control
5. ON/OFF power control
6. Zone A: Power & Time control knob
7. Zone B: Power & Time control knob

## REGISTER YOUR APPLIANCE

AU: [www.inalto.house/registration](http://www.inalto.house/registration)

NZ: [www.inalto.house/nz/registration](http://www.inalto.house/nz/registration)

## USING YOUR COOKTOP

To start cooking:

- Touch the "ON/OFF" power control and all the displays will show "--" or "--".
- Make sure the bottom of the pan and the surface of the cooking zone are clean and dry. Then place a suitable pan on the cooking zone that you wish to use.
- Rotate the heating zone selection control knob for your desired zone.
- Adjust the temperature setting by turning the knob between 0–9. You can modify this temperature at any time during cooking.

To end cooking:

- Turn the whole cooktop off by pressing the "ON/OFF" button.
- Alternatively, adjust your desired zone temperature until the display shows "0" by rotating the knob anticlockwise. After a cooking zone is off, the relevant display will show "H" until the zone has cooled to a safe temperature.

Note: For further Operation Instructions refer to pages 10–12 of your user manual.

## DETAILS

Dimensions (W, D, H mm): 288 × 520 × 59.5

Built-in Dimensions (W, D mm): 268 × 500

Warranty: 3 Years (2 + 1 on registration)

## SUPPORT

Telephone: 1300 11 4357

Email: [support@residentiagroup.com.au](mailto:support@residentiagroup.com.au)