

84L Upright Freezer



FEATURES

84L Capacity, Adjustable Thermostat,
3 Wire Drawers, Adjustable Feet, Manual Defrost,
White Finish, 3 Star Energy Rating

Congratulations on your new InAlto 84L Upright Freezer

THE THERMOSTAT CONTROLS

Your fridge has one control for regulating the temperature. The temperature control is located at the rear, near the compressor. Depending on your room's ambient temperature, you may need to adjust the temperature setting to achieve your desired temperature.

The number on the thermostat dial does not directly represent the temperature. Instead, the larger the number is, the lower the freezer interior temperature will be.

- Dial position 1–2 will set your freezer to approximately -12°C
- Dial position 3–4 will set your freezer to approximately -15°C
- Dial position 5–6 will set it to approximately -20°C

YOUR UPRIGHT FREEZER

1. Storage baskets (x3)
2. Door
3. Foot
4. Top hinge assembly
5. Bottom hinge assembly + foot



YOUR UPRIGHT FREEZER

- When starting up for the first time, keep the freezer upright for 2 hours before connecting it to a power supply.
- When you install your appliance, set the thermostat knob to position 6 for the first 24–48 hours, after which you can set it to the level that best suits your needs. It is the best to wait 24 hours before adding food.

Please refer to your *User Manual Pages 11–12* for detailed instructions.

DETAILS

Energy Rating: 3 Stars
 Dimensions (W, D, H mm): 501 x 540 x 860
 Warranty: 2 Years

REGISTER YOUR APPLIANCE

AU: www.inalto.house/registration
 NZ: www.inalto.house/nz/registration

SUPPORT

Telephone: 1300 11 4357
 Email: support@residentiagroup.com.au